




## 847330 Mirror Attachment Set – Used with 7100 Mirror

Tools Required: #2 Robertson or Phillips screwdriver, tape measure

Hardware (supplied): 8 - 1 ½” screws

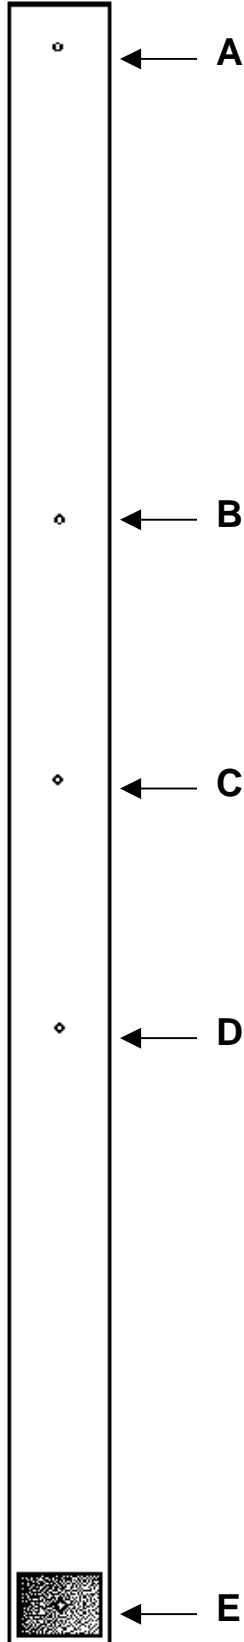

- **A** is the top, **E** is the bottom.
- **E** is used for all models, with **D** for dressers 3 drawers high & with **C** for dressers 4 drawers high.
- Use holes **A & B** to attach to the mirror.
- The 7100 mirror can be attached horizontally or vertically.

1. Determine the height from the floor that you want the bottom of the mirror to sit at.
2. Mark this height on the attachments, measuring from the bottom, **E**.
3. Fasten the attachments to the mirror with 4 screws, use **A** and **B**, keeping the attachments parallel to the inside edge of the mirror.
4. Stand the assembled unit up against the back of the dresser.
5. Position the assembled unit as you want it, usually centred
6. Attach it to the dresser with 4 screws, use **C** or **D** and **E**.

