






# Bookcase Bed Assembly Instructions

Use for models: 4336, 4355, 4436, 4455, 4532, 4536, 4555 as well as the extra-long versions of these beds – identified with a Q added to the model number.

Tools required:  $\frac{9}{16}$ " socket or wrench, #2 Robertson or Phillips screwdriver

**Please read the instructions completely prior to starting.**

1. Fasten 2 side rails "A" to the "stapled" side of the footboard using 4 – 4" bolts "B" with 4 washers "C". Be sure the groove on the side rails is on the inside, close to the bottom & that the ends of the side rails with 2 small pilot holes through the face are at the headboard end.
2. Position the side rails into the rail slots in the headboard. Ensure that the rails are inserted as far as they will go.
3. Fasten the side rails to the headboard with 2 – 2 ½" screws "F" per rail through the pilot holes into the headboard.
4. **4355, 4355Q, 4455, 4455Q, 4555 only:** If a 3 drawer unit was ordered, install it prior to step 5. Position the drawer unit on the drawer unit support rail shown on the headboard & on the matching rail on the footboard. See picture below.
5. Slide all slats into the grooves on the side rails of the bed assembly – top side up. (**Note:** – see slat diagram below. The pilot holes for the screws are further from the ends of the slats on the top side of the slat).
6. Place one slat ½" from the footboard & one slat even with the front of the headboard. Secure in place using one 1 ¼" wood screw "D" through the pilot hole at each end of the slat. Position the other 2 slats evenly spaced between the end slats. Secure the centre slats with one 1 ½" wood screw "E" at each end of the slat.
7. Place the posture boards centred on the slats. Fasten the posture boards into the end slats with 1 ¼" screws "D".

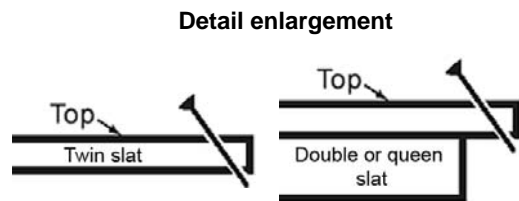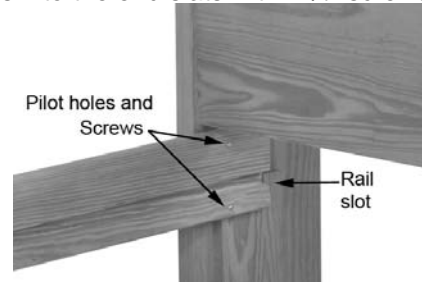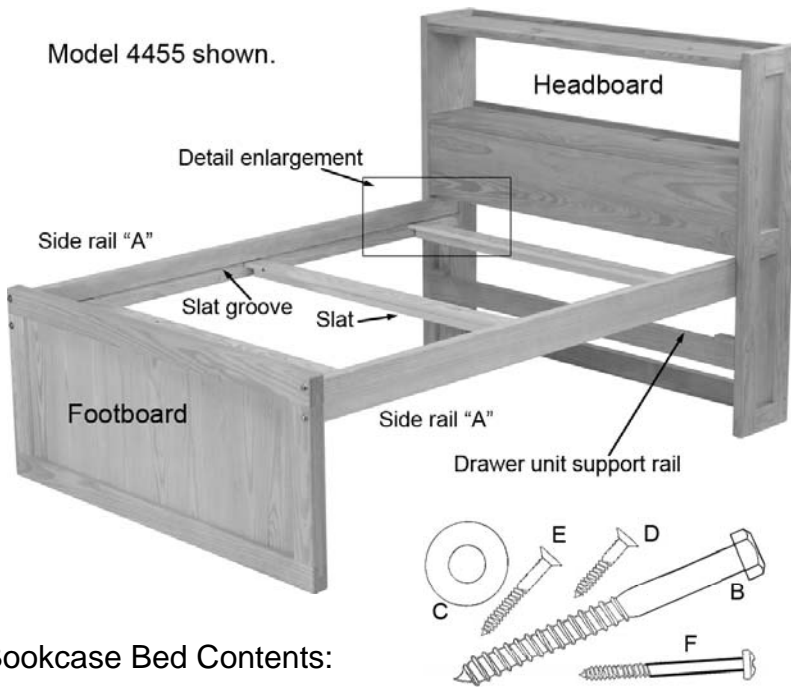

**Slat diagram**

Install slats with the pilot hole showing as above. Twin slats are  $\frac{3}{4}$ " thick. Double and queen slats are a  $\frac{3}{4}$ " thick board reinforced with a thicker board on the bottom – install as shown above.

## Bookcase Bed Contents:

- 1 – Headboard
- 1 – Footboard
- 2 – Side rails (A)
- 4 – Slats
- 4 – 4" bolts (B)
- 4 – Washers (C)
- 8 – 1 ¼" screws (D)
- 4 – 1 ½" screws (E)
- 4 – 2 ½" screws (F)

### 4019A and 4919A

1. Attach mounting blocks (G) to both end panels (if necessary).
2. Position the drawer unit on the drawer unit support rail shown in the picture above & on the matching rail on the footboard.
3. Screw lock block (H) to the footboard.
4. Screw the mounting block (G) to the headboard rail. \* See diagram

