






## Mission Bed Assembly Instructions

Use for models: 4767,4787,4769,4789,4867,4887,4869,4889,4967,4987,4969,4989,4717, 4817,4917,4715,4716,4718,4725,4727,4728 as well as the extra-long versions of these beds – identified with a Q added to the model number.

Tools required:  $\frac{9}{16}$ " socket or wrench, #2 Robertson or Phillips screwdriver

**Please read the instructions completely prior to starting.**

1. Fasten 2 side rails "A" to the headboard end and the footboard end using 8 – 4" bolts "B" with 8 washers "C". Be sure the groove on the side rails is on the inside, close to the bottom.
2. Slide slats into the grooves on the side rails of the bed assembly – top side up. (**Note:** – see slat diagram below. The pilot holes for the screws are further from the ends of the slats on the top side of the slat).
3. Place one slat  $\frac{1}{2}$ " from the footboard & one slat  $\frac{1}{2}$ " from the headboard. Secure in place using one  $1\frac{1}{4}$ " wood screw "D" through the pilot hole at each end of the slat. Position the other 2 slats evenly spaced between the end slats. Secure the centre slats with one  $1\frac{1}{2}$ " wood screw "E" at each end of the slat.
4. Place the posture board (if ordered) on the slats. Posture boards sit loosely on top of the slats. Add the mattress (and guardrail on day bed models).

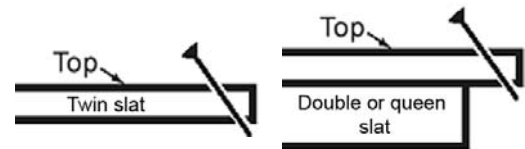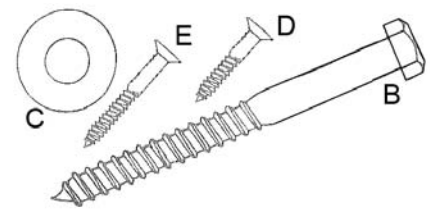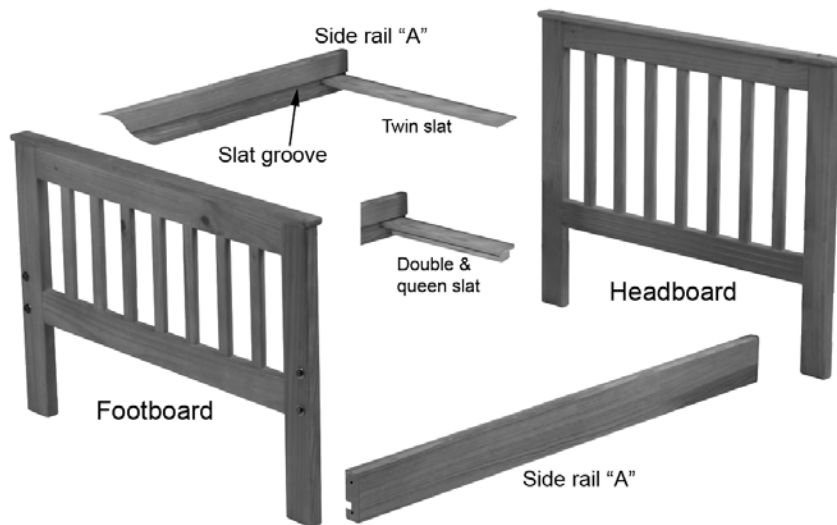

**Slat diagram**

Install slats with the pilot hole showing as above. Twin slats are  $\frac{3}{4}$ " thick. Double and queen slats are a  $\frac{3}{4}$ " thick board reinforced with a thicker board on the bottom – install as shown above.

### Mission Bed Contents:

- 1 – Headboard
- 1 – Footboard
- 2 – Side rails (A)
- 4 – Slats
- 8 – 4" bolts (B)
- 8 – Washers (C)
- 4 –  $1\frac{1}{4}$ " screws (D)
- 4 –  $1\frac{1}{2}$ " screws (E)

- Twin beds include a posture board.
- Posture boards are optional on double and queen beds.
- Day beds and upper bunkbeds include guardrail(s).